



Samsung Galaxy J7 Home Button Flex (video) Replacement

How to fix insensitive Home Button? Is your Navigation Button intact but you just can't use it?
Follow this video and repair it by yourself.

Written By: Eric

Galaxy J7 Home Button Flex with Earphone Jack

Repair Guide



INTRODUCTION

[video: <https://www.youtube.com/watch?v=cCBvgvxPu6g>]

How to fix insensitive Home Button? Is your Navigation Button intact but you just can't use it? Follow this video and repair it by yourself.



TOOLS:

- [Plastic Cards](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Heat Gun](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



PARTS:

- [Original Home Button Flex with Earphone Jack for Samsung Galaxy J7](#) (1)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:58:34 PM.